



### AR16 & AR21 WHEEL BUGGY

### **PARTS & DECALS MANUAL**

MANUAL PART #: 055838P | REVISION: F

### For information regarding the following, please see "AR16 & AR21 - Safety & Operator Manual"

- Warranty Information
- Dealer Information
- How to identify the Model / Serial Numbers on the machine

Engine Detail

Page 2 055838P

### Power Buggy

### **OPERATIONS-PARTS**

### **MANUAL**

### This manual covers the products listed below:

<u>Part No.</u>	<u>Description</u>
058801	BUGGY AR16 POLY BUCKET 13HPR FOAM
058802	BUGGY AR16 POLY BUCKET 13HPE FOAM
058809	BUGGY AR16 STEEL BUCKET 13HP RECOIL
058810	BUGGY AR16 STEEL BUCKET 13HP ELEC
058803	BUGGY AR21 POLY BUCKET 20HPE FOAM
058813	BUGGY AR21 STEEL BUCKET 20HPE FOAM

### **Table of Contents**

Sect No.	Title	Page
1.0	Parts	5
1.1	General Arrangement	8
1.2	Steering Column	10
1.3	Service & Parking Brake	12
1.4	Hydraulic System	16
1.5	Hydraulic Motor	20
1.6	Bucket & Base Assembly	22
1.7	Travel Speed Control Assembly	24
1.8	Wheel Assembly	26
1.9	Console Mounted Dump Lever	28
1.10	Handle Mounted Dump Lever	30
1.11	13HP Honda Engine with Recoil & Electric Start (AR16)	32
1.12	Electric Schematic for AR16 with 13HP Honda Engine (Recoil Start)	33
1.13	Electric Schematic for AR16 with 13HP Honda Engine (Electric Start)	34
1.14	Electric Schematic for AR21 with 20HP Honda Engine with Electric Start	36
1.15	Propane Assembly (AR16 ONLY)	40
1.16	Filter Kits	42
2.0	Decals	43
2.1	Decals, AR16	
2.2	Decals, AR16P	
2.3	Decals, AR21	

Page 4 055838P

# **Section 1 PARTS**

### **Factory Service Information**

This section contains the illustrated drawings and parts list for help in identifying and/or ordering replacement parts for your machine. Follow the instructions in the front section of this manual "Ordering Parts" when ordering replacement parts to insure prompt and accurate delivery.



All set screws have blue (LOC-TITE<sup>TM</sup>) applied at the factory. If set screw is removed or loosened for any reason re-apply blue (LOC-TITE<sup>TM</sup>).



All grease fittings are capped with CAP PLUG GC-5(AEC PN 015692) to protect the fitting. If cap becomes missing or damaged replace it as soon as possible.

Anti-Seize is applied at the factory to all drive line coupling,



gear box main and counter shafts and pitch control threaded rod assemblies. If these parts are disassembled re-apply a light coat of a graphite based anti-seize.

Page 6 055838P

### **Replacement Parts Procedures**

### SECTION 1 PARTS

We recommend AEC quality replacement parts, available from the AEC Customer Service Department or your nearest AEC Dealer.

Part numbers are subject to change without notice. Part numbers might be different outside of the United States of America. Use part numbers listed in the applicable parts list table when you place your order. If a part number changes, the AEC Customer Service Department or your nearest AEC dealer will have the latest part number for the replacement part.

Remember when you order replacement parts, you will need your model number and serial number. These are the numbers that you have recorded in the UNIT ID section of this manual. Please order replacement parts by the appropriate part number, not the key number.


This manual contains an illustrated parts list for help in ordering replacement parts for your machine. Follow the instructions below when ordering parts to insure prompt and accurate delivery:

- 1. All orders for service parts include the serial number for the machine. Shipment will be delayed if this information is not available.
- 2. Include correct description and part number from the "PARTS" Section 4.
- 3. Specify exact shipping instructions, including the preferred routing and complete destination address.
- 4. **DO NOT** return parts to AEC without receiving written authorization from AEC. All authorized returns must be shipped pre-paid.
- 5. When placing an order, please contact the AEC Dealer nearest you.



All information, specifications, and illustrations in this manual are subject to change without notice and are based on the latest information at the time of publication.

### 1.1 - General Arrangement, Illustration

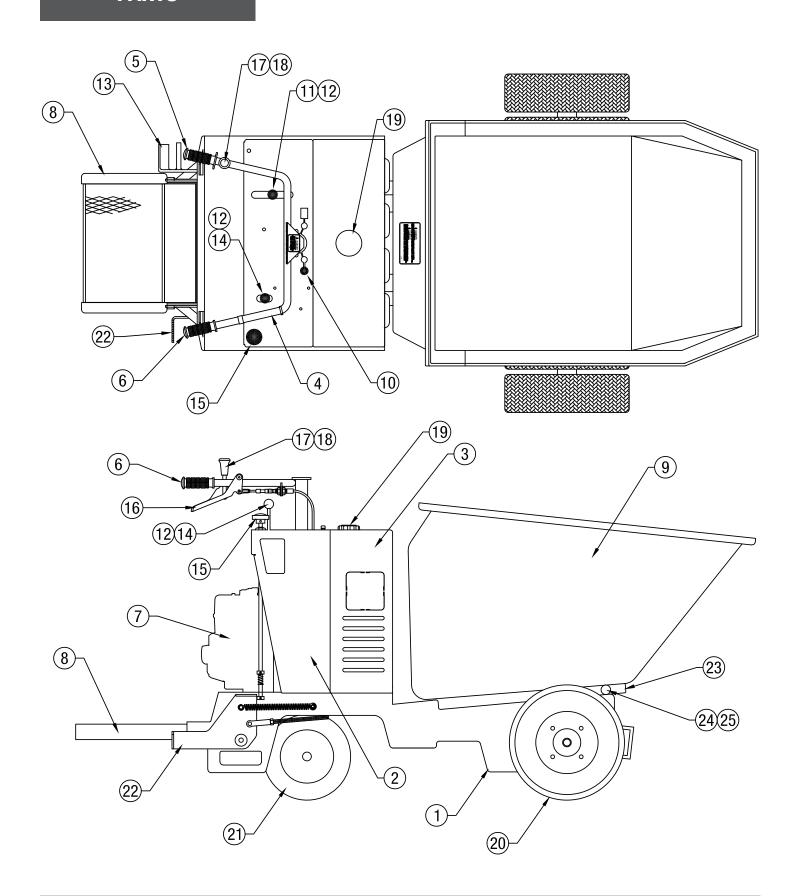


### 1.1 - General Arrangement, Parts List

### SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	42100-36	Main Frame	1
2	42100-38	Console	1
3	42108-01	Hydraulic Reservoir Cover	1
4	42126-01	Standard Handle Bar Less Grips	1
5	42102-07	LH Handle Bar Grip	1
6	42102-08	RH Handle Bar Grip with Trimmed Flange	1
	EN0600	13HP Honda Recoil Start Engine	1
7	EN1700	13HP Honda Electric Start Engine	1
7	45320-09	20 HP Honda Electric Start Engine for AR21	1
	42124-01	DISCONTINUED - 18 HP Honda Electric Start Engine- AR21	1
8	42115-01	Operator's Platform	1
	42106-03	16 ft <sup>3</sup> Polyurethane Bucket- AR16	1
9	42105-01	16 ft <sup>3</sup> Steel Bucket - AR16	1
9	42122-01	21 ft <sup>3</sup> Polyurethane Bucket - AR21	1
	42121-08	21 ft <sup>3</sup> Steel Bucket - AR21	1
	45049-25	Pushbutton, E-Stop for <b>RECOIL START</b> - 1 NO Contact (for machines built <b>AFTER</b> Serial #G-16595) [see Page 101 for more detail]	1
10	45043-04	Pushbutton, E-Stop for <b>ELECTRIC START</b> - 1 NO & 1 NC Contacts (for machines built <b>AFTER</b> Serial #G-16595) [see Page 102 & 106 for more detail]	1
	EM0100	Pushbutton, Emergency Stop (for machines <b>PRIOR</b> to Serial #G-16596)	1
11	42117-02	Dump Lever	
12	MS2100	Ball Knob	1
13	42117-17	Foot Operated Dump Pedal	1
14	42103-65	Handle for Directional Control Valve	1
15	42101-71	Parking Brake Knob	1
16	42107-25	Speed Control Lever	1
17	42126-18	Handlebar Mounted Bucket Dump Handle	1
18	42126-21	Knob for Handlebar Mounted Dump	1
19	FI0350	Cap, Breather (for Hydraulic Tank, with Dipstick)	1
20	42113-20	Foam Filled Drive Tire with Wheel	4
20	42113-06	Pneumatic Drive Tire with Wheel	4
01	42113-21	Foam Filled Steering Tire with Wheel	2
21	42113-02	Pneumatic Steering Tire with Wheel	2
22	42101-44	Brake Pedal	
22	42110-02	Bucket Base Plate AR16	1
23	063321	Bucket Base Plate AR21	1
24	42110-11	Pivot Pin for Bucket Base Plate	1
25	42110-16	Clamp Collar for Bucket Base Plate	1

### 1.2 - Steering Column, Illustration

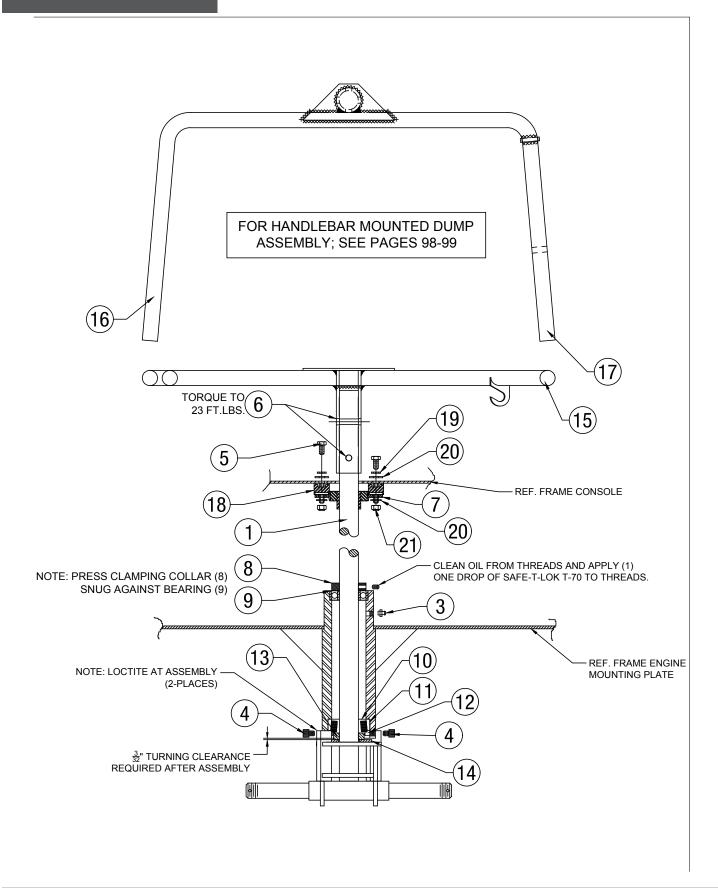

Page 10 055838P


### 1.2 - Steering Column, Parts List

### SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	32100-01	Steering Column	1
2	32100-05	Spring Pin. [NOT SHOWN] (Used on all machines built prior to November 2006)	2
3	015681	Fitting, Grease, 90°	1
4	42100-17	Stop Bolt. 5/16"NC Socket Head Cap Screw X 3/8" LG. Grade 8	2
5	010019	Fastener, HHCS, 5/16"-18 x 3/4", Grade 8	2
6	040637	Hex Head Cap Screw. 3/8"NC X 2-1/4"LG. with Lock Nut	2
7	32100-08	Flanged Bearing	1
8	C00100	Clamping Collar	1
9	BE1400	Ball Bearing	1
10	BE1200	Bearing Cone	1
11	BE1300	Bearing Cup	1
12	MS3700	Grease Seal	1
13	32100-15	Spacer	1
14	32100-16	Flat Washer	1
15	42126-01	Handlebar	1
16	42102-07	Handlebar Grip, Untrimmed.	1
17	42102-08	Handlebar Grip, Trimmed.	1
18	32100-21	Stud Mounted Rubber Isolator	2
19	010090	Fastener, Lock Washer, 5/16", Grade 8	2
20	010082	Fastener, Flat Washer, 5/16", Grade 8	4
21	040004	Fastener, Hex Nut, Stover, 5/16"-18	2
22	42126-09	Washer, Rubber (NOT SHOWN)	1




### 1.3 - Service & Parking Brake, Illustration

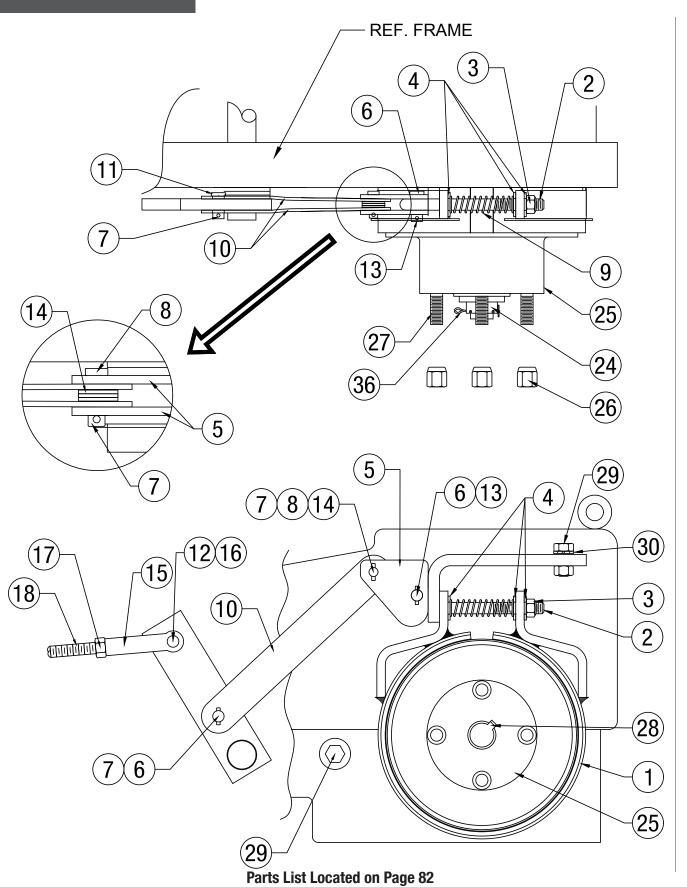

# 1.3 - Service & Parking Brake, Illustration, continued

# SECTION 1 PARTS

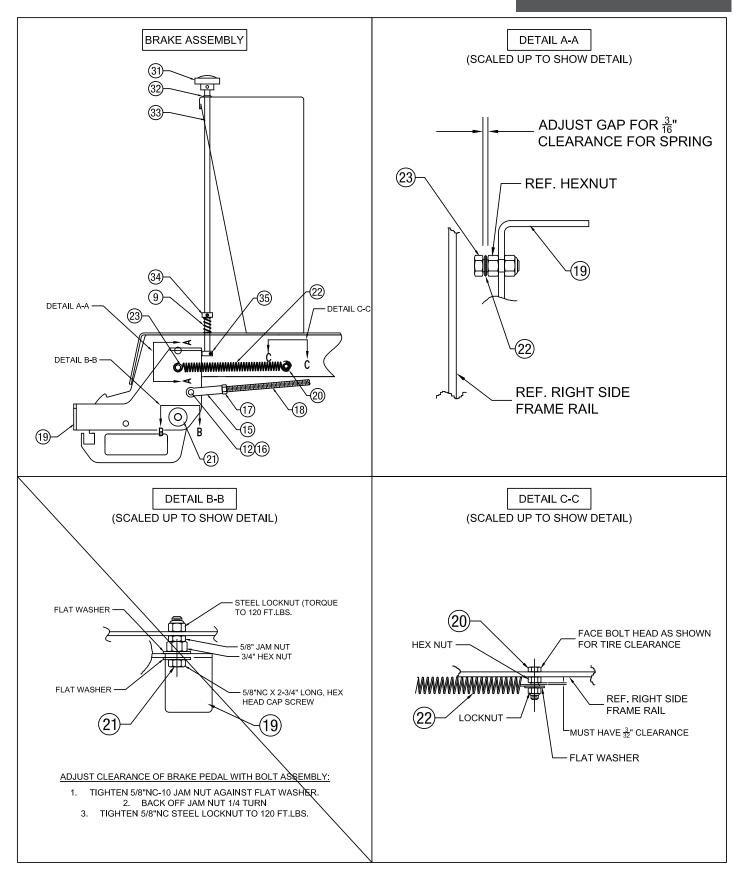


### 1.3 - Service & Parking Brake, Parts List

ITEM	PART#	DESCRIPTION	QTY
1	42101-02	Brake Band	2
2	42101-15	"J" Bolt	2
3	42101-16	1/2" NC-13 Nylock Locknut, Grade 2/IFI-100/107 No Substitutes	2
4	011490	1/2" SAE Plated Flat washer	12
5	42101-18	Brake Cam (replace in matched pairs only)	4
6	42101-19	Case Hardened Clevis Pin x 1-5/16" Overall Length. No Substitutes	4
7	42101-20	5/32" Diameter X 3/4" Lg. Spring Pin. No Substitutes - Do not use cotter pin	4
8	42101-22	Clevis Pin x 1-1/8" Overall Length	2
9	SN0150	Compression Spring	3
10	42101-28	Brake Cam Link Arm	4
11	-	-	-
12	42101-31	1/8" x 3/4" Cotter Pin	2
13	42101-32	3.5mm x 20mm Lg. Spring Pin. No Substitutes. Do not use cotter pin.	2
14	017751	3/8" USS Flat Washer	4
15	MS3900	Adjustable Yoke End	2
16	MS3800	Yoke Pin	2
17	01 0106	1/2" NC Hex Nut	2
18	42101-38	Brake Rod. Plated. All Thread SAE Grade 2 minimum. No substitutes	1
19	42101-44	Brake Pedal	1
20	42101-46	Bolt Assembly. 3/8" NC-16 x 1-1/2" Lg. HHCS with USS Flat Washer, Lock Nut, and Hex Nut.	1
21	42101-47	Bolt Assembly. 5/8" NC-10 x 2-3/4" Lg. HHCS with 3/4" NC Hex Nut, 5/8" NC-10 Jam Nut, 5/8"NC-10 Steel Lock Nut, two(2) 5/8" SAE Flat Washers.	1
22	42101-48	Spring, Brake Pedal Return	1
23	42101-49	Bolt Assembly. 1/2" NC-13 x 1-1/2"Lg. HHCS with Lock Nut and Hex Nut.	1
24	42103-64	1"-20 Castle Nut for Hydraulic Wheel Motor	2
25	42101-61	Wheel Hub (includes four (4) Wheel studs)	2
26	42113-09	Cone Type Wheel Nut	16
27	42101-63	(REPLACEMENT) Wheel Studs Only for Wheel Hub (4 per Wheel)	8
28	42103-63	(REPLACEMENT) 5/16" Square Key X 1" Long for Wheel Hub (1 per Wheel)	2
29	010068	Fastener, Bolt, HHCS, 1/2"-13 x 1-1/4", Grade 8	4
30	010093	Fastener, Washer, Lock, 1/2", Grade 8	2
31	42101-71	Palm Grip	1
32	42101-72	Grommet	1
33	42101-73	Parking Brake Catch Rod	1
34	42101-74	Set Collar	1
35	42101-75	Clamping Collar	1
36	42103-87	Pin, Cotter, 5/32 x 2"	1

Page 14 055838P


### PAGE LEFT BLANK INTENTIONALLY

### 1.4 - Hydraulic System, Illustration

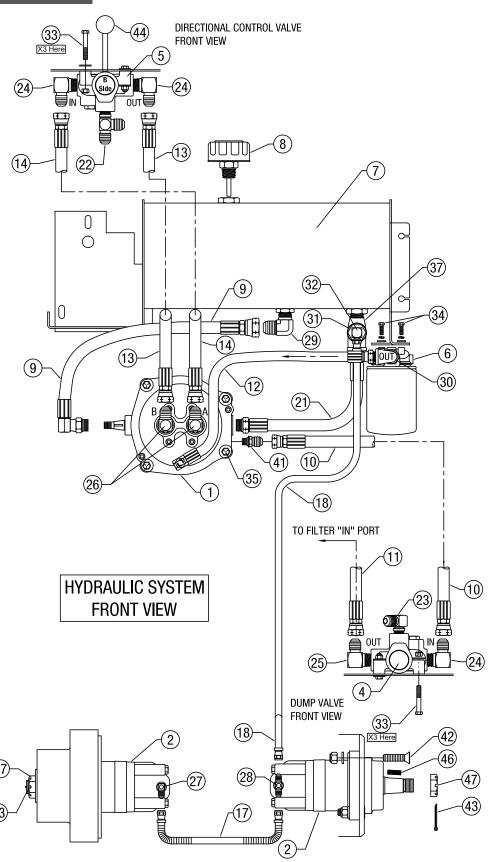

# 1.4 - Hydraulic System, Illustration, continued

# SECTION 1 PARTS

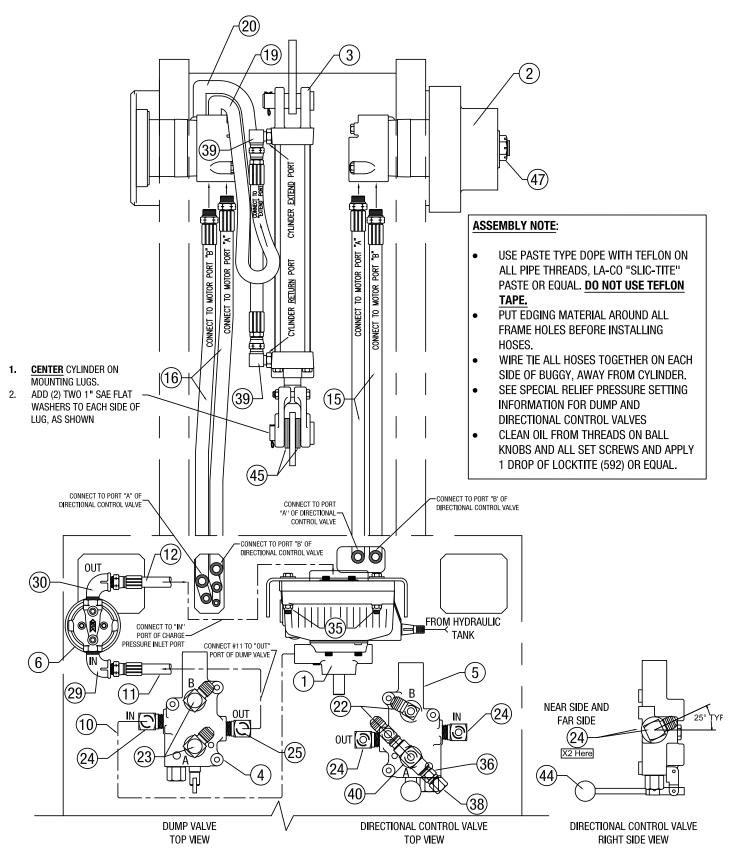

**Parts List Located on Following Page** 

### 1.4 - Hydraulic System, Parts List

ITEM	PART#	DESCRIPTION	QTY
1	HM0500	Hydrostatic Pump	1
2	HM0600	Motor, Wheel, MB16/21 (includes: (1) 5/16" square x 1" long key, (1) Castle Nut, 1" x 20 TPI)	2
0	HM0700	*AT16 MODEL* Cylinder, Hydraulic, 2" Diameter Bore	1
3	056815	*AT21 MODEL* Cylinder, Hydraulic, 3" Bore (2T301)	1
4	HM0800	Valve, Dump, MB16/21	1
5	HM0900	Valve, Directional Control	1
6	FI0200	Filter Assembly, Spin-on with Element	1
7	42104-1	Hydraulic Reservoir (Tank)	1
8	FI0350	Cap, Breather (for Hydraulic Tank, with Dipstick)	1
9	061055	Hose Assembly, 17" Long, Straight-90°	1
10	HH1700	Hose Assembly, 20" Long	1
11	061061	Hose Assembly, 16" Long	1
12	061060	Hose Assembly, 18" Long, Straight-90°	1
13	HH1900	Hose Assembly, 27" Long	1
14	HH2000	Hose Assembly, 30" Long	1
15	061056	Hose Assembly, 69" Long	2
16	061058	Hose Assembly, 65" Long	2
17	HH2100	Hose Assembly, 18" Long with Spring Guard	1
18	HH2200	Hose Assembly, 54" Long with Spring Guard	1
19	HH2300	Hose Assembly, 72" Long with Spring Guard	1
20	HH2400	Hose Assembly, 66" Long with Spring Guard	1
21	HH2500	Hose Assembly, 18" Long	1
22	FG3800	Fitting, Tee, Male	2
23	FG3900	Fitting, Elbow, Male, 90°	2
24	FG3700	Fitting, Elbow, Male, 90°	3
25	061292	Fitting, Elbow, Male, 90°	1
26	FG4000	Fitting, Elbow, Straight Thread, 90°	2
27	FG4100	Fitting, Elbow, Straight Thread, 90°	1
28	FG4200	Fitting, Tee, Straight Thread	1
29	023414	Fitting, Elbow, 1/2" M x 1/2" F, 90°	2
30	061059	Fitting, Elbow, 90° (F2501-6-8-0)	1
31	42103-44	Bushing, 3/4" x 1/4", Hex Reducer	1
32	FG4300	Fitting, Elbow, Male, 90°	1
33	42103-47	Bolt Assembly ((1) 5/16" NC HHCS x 1-3/4" Long, (1) 5/16" Flat Washer, (1) 5/16-18 Stover Nut)	6
34	42103-48	Bolt Assembly ((1) 1/4" NC HHCS x 3/4" Long, (1) Split Lock Washer, (1) SAE Flat Washer)	2
35	42103-49	Bolt Assembly (1) 3/8"-16 NC HHCS x 2-1/2", (1) 3/8" Flat Washer, (1) 3/8"-16 Nylock Lock Nut)	4
36	42103-50	Fitting, Connector, Male, Straight	1
37	42103-53	Fitting, Tee, Street	1
38	42103-54	Fitting, Cap	1
39	FG3600	Fitting, Elbow, 90°	2

Page 18 055838P

# 1.4 - Hydraulic System, Parts List, continued

 
### SECTION 1 PARTS


ITEM	PART#	DESCRIPTION	QTY
40	42103-56	Fitting, Tee, Male	1
41	42013-59	Fitting, Connector, Straight Thread	1
42	068347	Bolt Assembly, ((1) 1/2" NC Hex Socket Flat Head Cap Screw x 2" Long, (1) split Lock Washer, (1) Nylock Lock Nut)	8
43	42103-87	Pin, Cotter, 5/32" x 2" (for Wheel Motor)	2
44	42103-65	Handle, Directional Valve	1
45	055034	Washer, Flat, 1", GR8	4
46	42103-63	(REPLACEMENT) Key, Wheel Motor, 5/16" square x 1" Long (1 per wheel)	2
47	42103-64	(REPLACEMENT) Nut, Castle, Wheel Motor, 1"-20 Threads per Inch (1 per wheel)	2

	DUMP & DIRECTIONAL VALVE ASSEMBLY DETAIL		
ITEM	TEM PART # DESCRIPTION C		QTY
4A	42103-69	Assembly, Dump Valve, (consists of part #'s 4, 23, 24, 25)	1
5A	42103-76	Assembly, Directional Valve (consists of part #'s 5, 22, 24, 36, 38, 40)	1

REPLACEMENT SEAL KITS		
PART#	DESCRIPTION	
42103-99	AR16 Lift Cylinder Seal Kit	
100135	AR21 Lift Cylinder Seal Kit	
42103-85	Directional Control Valve and Dump Valve Seal Kit	

# 1.5 - Hydraulic Motor, Illustration & Parts List (AR16 Models)



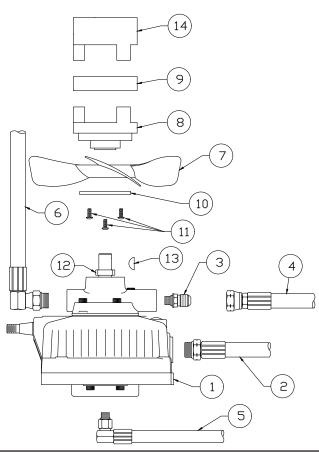


ITEM	PART #	DESCRIPTION (for AR16 Models)	QTY
1	HM0500	Hydrostatic Pump	1
2	HH2500	Hose Assembly, 18" Long, Straight	1
3	42103-59	Connector, Straight Thread "O" Ring	1
4	HH1700	Hose Assembly, 20" Long	1
5	061060	Hose Assembly, 18" Long, 90°-Straight	1
6	061055	Hose Assembly, 17" Long	1
7	42103-07	Fan, Transmission	1
8	42103-08	Coupling, Pump Side, Hydraulic Assembly	1
9	PM0150	Element, Spider Jaw	1
10	42103-10	Washer, Flat	1
11	42103-11	Fastner, FSHCS 1/4"-20 x 3/4"	3
12	056700	Spacer, Shaft, 11/16"	1
13	42103-13	Key, Woodruff, #606 (3/16" x 3/4" Long)	1
14	PM0100	Coupling, Half, 1" Bore, Engine Side	1
15	064393	Key, 1/4 Sq X 1-3/4 High Carbon 109	1

Page 20 055838P


# 1.5 - Hydraulic Motor, Illustration & Parts List (AR21 Models)


# SECTION 1 PARTS

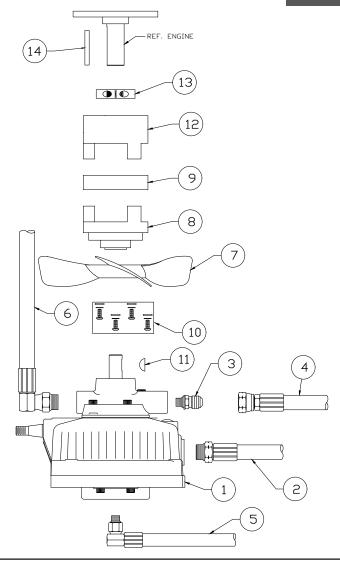


ITEM	PART #	DESCRIPTION (for AR21 Models)	QTY
1	HM0500	Hydrostatic Pump	1
2	HH2500	Hose Assembly, 18" Long, Straight	1
3	42103-59	Connector, Straight Thread "O" Ring	1
4	HH1700	Hose Assembly, 20" Long	1
5	061060	Hose Assembly, 18" Long, 90°-Straight	1
6	061055	Hose Assembly, 17" Long	1
7	42123-01	Fan, Transmission	1
8	42123-05	Coupling, Pump Side, Hydraulic Assembly	1
9	42123-06	Element, Spider Jaw	1
10	42123-03	Bolt Assembly ((4) #10-24 ,HSBHCS, x 1/2" Long, (4) Star Lock Washer, (4) #10 Flat Washer)	1
11	42103-13	Key, Woodruff, #606 (3/16" x 3/4" Long)	1
12	42123-04	Coupling, Half, 1" Bore, Engine Side	1
13	42303-16	Collar, Clamping	1
14	064393	Key, 1/4 Sq X 1-3/4 High Carbon 109	1

### 1.6 - Bucket & Base Assembly, Illustration

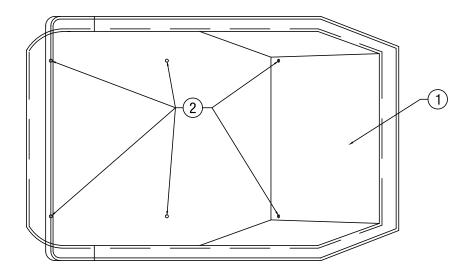

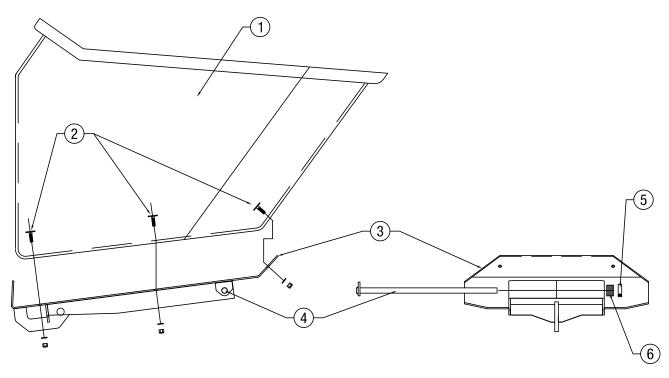

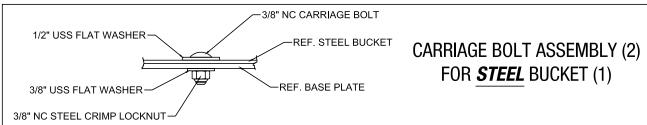


Page 22 055838P

### 1.6 - Bucket & Base Assembly, Parts List

### SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
	42106-03	AR16 - Polyurethane Bucket - 16 ft <sup>3</sup>	1
1	42105-01	AR16 - Steel Bucket - 16 ft <sup>3</sup>	1
'	42122-01	AR21 - Polyurethane Bucket - 21 ft <sup>3</sup>	1
	42121-08	AR21 - Steel Bucket - 21 ft <sup>3</sup>	1
2	42106-02	Polyurethane Bucket - Elevator Bolt Assembly (3/8" NC Elevator Bolt x 1-1/2" Long with 3/8" SAE Flat Washer and 3/8" NC Nylock Locknut)	6
2	42105-10	Steel Bucket - Carriage Bolt Assembly (3/8" NC Carriage Bolt x 1" Long with 1/2" USS Flat Washer, 3/8" USS Flat Washer and 3/8" NC Steel Crimp Locknut)	6
3	42110-02	AR16 - Bucket Base Plate	1
S	063321	AR21 - Bucket Base Plate	1
4	42110-11	Pivot Pin	1
5	42110-16	Clamping Collar	1
6	42110-17	Washer, Spacer (3/4" SAE Flat Washer Discontinued 09/08)	6

### 1.7 - Travel Speed Control Assembly, Illustration

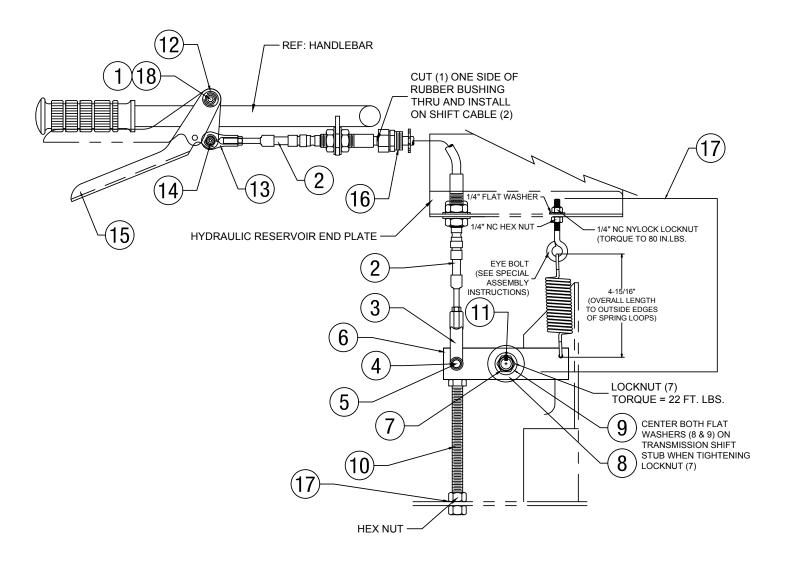

Page 24 055838P

### 1.7 - Travel Speed Control Assembly, Parts List

# SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	42107-04A	Fastener, Bolt, Shoulder, 3/8" x 1-1/2"	1
2	CT0900	Shift Cable	1
3	MS2500	Adjustable Yoke End	1
4	42107-11	Clevis Pin	1
5	42107-12	Plated Cotter Pin (3/32" x 3/4")	1
6	42107-13	Transmission Shift Bar	1
7	42107-14	1/2" NC Steel Lock Nut	1
8	42107-15	5/ 8" USS Flat Washer	1
9	42107-16	V2" SAE Flat Washer	1
10	42107-17	Neutral Stop Bolt With Hex Nut	1
11	42107-21	1/ 8" x 5/8" Woodruff Key	1
12	42107-22	3/8" SAE Flat Washer	2
13	42107-23	Tie Rod End	1
14	42107-24	Shoulder Bolt with Nylock Lock Nut	1
15	42107-25	Travel Speed Control Lever	1
16	42107-30	Metal Cord Grip	1
17	010093	Fastener, Lock Washer, 1/2"	1
18	040208	Fastener, Nut, Stover, 1/2"-13	1


ITEN	PART #	DESCRIPTION	QTY
18	42107-27	Extension Spring Repair Kit (Consists of: Extension Spring, 1/4" NC Eye Bolt, 1/4" USS Flat Washer, 1/4" NC Nylock Lock Nut) <b>(See Assembly Note For Important Assembly Information)</b>	1

### \*Assembly Note for Extension Spring Repair Kit:


- 1. Adjust the Eye Bolt so the length of the Extension Spring is 4-15/16" from the outside edges of the end Spring Loops when the Transmission Shift Bar, item 13, is in the NEUTRAL position (against the Neutral Stop Bolt, item 17) as shown in the assembly drawing.
- 2. Then turn the Position the "Eye" of the Eye Bolt to line to with the top Spring Loop as shown in the assembly drawing.
- 3. After completion of steps 1-2, hold the Eye Bolt position and tighten the" NC Nylock Lock Nut to 80 in.lbs

### 1.8 - Wheel Assemblies, Illustration

#### DRIVE / FRONT WHEEL ASSEMBLY

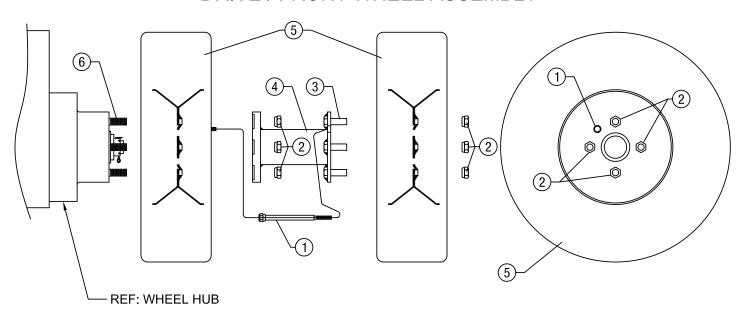

#### STEERING / REAR WHEEL ASSEMBLY

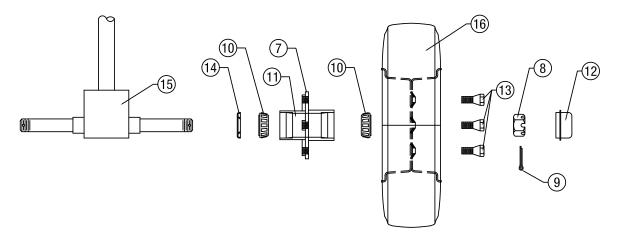

Page 26 055838P

### 1.8 - Wheel Assemblies, Parts List

# SECTION 1 PARTS


DRIVE / FRONT WHEEL ASSEMBLY				
ITEM	PART#	DESCRIPTION	QTY	
1	MS4000	Air Valve Extender. Discontinued March, 2002	2	
2	42113-09	Cone Wheel Nut.	16	
3	42116-05	Wheel Studs for Wheel Spacer, item 19	8	
4	42116-01	Wheel Spacer	2	
5	42113-20	Foam Filled Drive Tire and Wheel Assembly	4	
6	42101-63	Brake Hub Wheel Studs	8	

**\*NOTE:** Part quantities referenced in this table represent quantity needed **PER MACHINE**.

		STEERING / REAR WHEEL ASSEMBLY	
ITEM	PART#	DESCRIPTION	QTY
7	42113-03	High Speed Hub Complete with Bearings, Grease Seal and Grease Cap	2
8	42113-04	Castle Nut	2
9	42113-05	Cotter Pin Ws" x 1 Y.")	2
10	42113-12	Roller Bearing Cone	4
11	42113-13	Roller Bearing Cup	4
12	42113-14	Grease Cap	2
13	42113-15	Wheel Bolts	8
14	42113-16	Grease Seal	2
15	32100-01	Steering Column	1
16	42113-21	Foam Filled Steering Tire and Wheel Assembly	2

**\*NOTE:** Part quantities referenced in this table represent quantity needed **PER MACHINE**.

### 1.9 - Console Mounted Dump Lever, Illustration

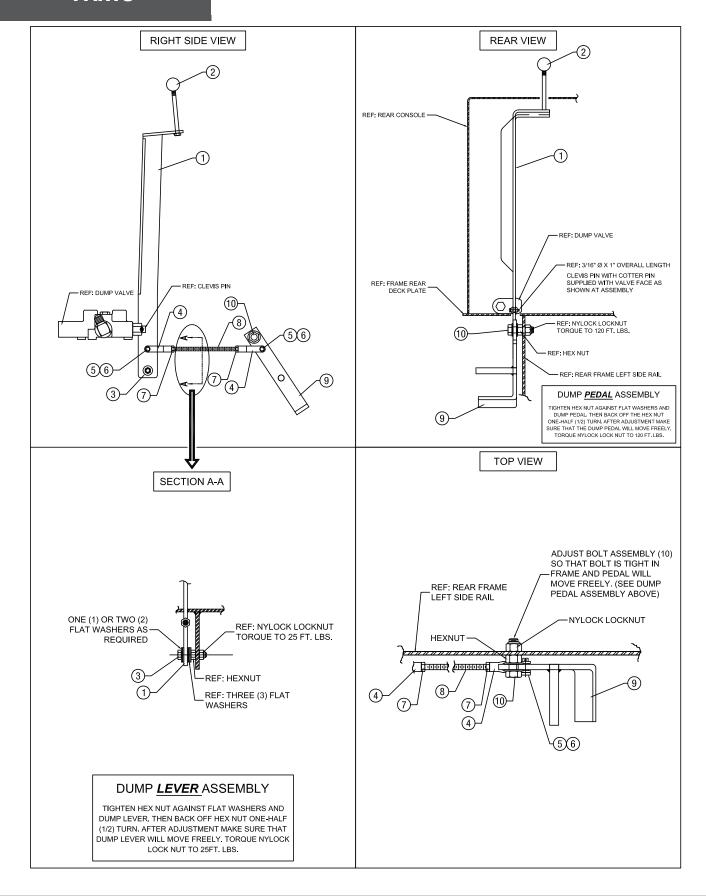


Page 28 055838P


### 1.9 - Console Mounted Dump Lever, Parts List

# SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	42117-02	Dump Lever	1
2	MS2100	Plastic Ball Knob	1
3	42117-08	Bolt Assembly (3/8" NC X 1-3/4" HHCS with (7) USS Flat Washers, (1) Hex Nut, and (1) Nylock Lock Nut)	1
4	42117-09	Yoke	2
5	42107-11	Clevis Pin	2
6	42117-11	Cotter Pin. 3/32" x 3/4" Long	2
7	42117-12	Hex Nut. 3/8" NF-24	2
8	42117-13	Dump Rod	1
9	42117-17	Dump Pedal	1
10	42117-23	Bolt Assembly (5/8" NC x 2-1/4" HHCS with (2) SAE Flat Washers, (1) Hex Nut, and (1) NyLock Lock Nut)	1

### 1.10 - Handlebar Mounted Dump Lever, Illustration

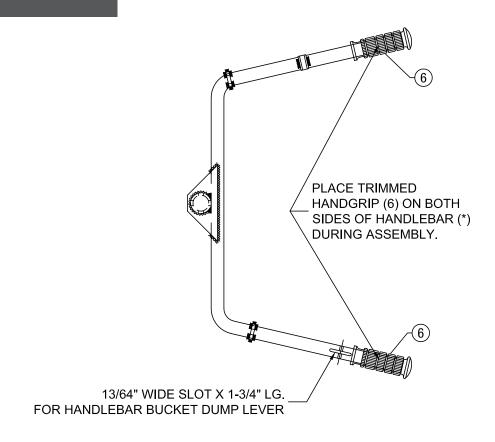

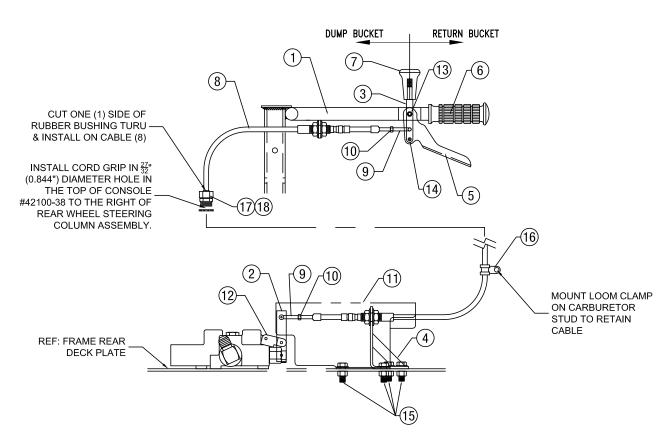


Page 30 055838P

### 1.10 - Handlebar Mounted Dump Lever, Parts List

### SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	42126-12	Handlebar with Dump Mount	1
2	42126-13	Handlebar Dump Lever	1
3	42126-14	Dump Rod Lever without Knob	1
4	42126-15	Cable Mounting Bracket	1
5	42126-18	Dump Lever Pull Handle	1
6	42102-08	Handlebar Grip, Trimmed	2
7	42126-21	Dump Lever Knob	1
8	42126-22	Dump Cable	1
9	42126-23	Clevis with Pin	2
10	42126-24	Hex Nut. #10-32 UNF Plated	2
11	42126-25	Dump Cable Cover	1
12	42126-26	Valve Link Bracket Kit	1
13	42126-27	Bolt Assembly. 1/4" NC HHCS x 1-3/4" Long with 2 SAE Flat Washers, Steel Lock Nut	1
14	42126-28	Bolt Assembly. 1/4" NC x 1-X" Long Shoulder Bolt with 10-24 Nylock Lock Nut	1
15	42126-29	Bolt Assembly. 3/8" NC HHCS x 1-1/4" Long with SAE Flat Washer, Steel Crimp Lock Nut.	5
16	40120-27	3/8" I.D. Loom Clamp	1
17	42126-32	Metal Cord Grip	1
18	42107-31	Stamped Steel Locknut	1

# 1.11 - 13HP Honda Engine with Recoil & Electric Start (AR16), Illustration & Parts List

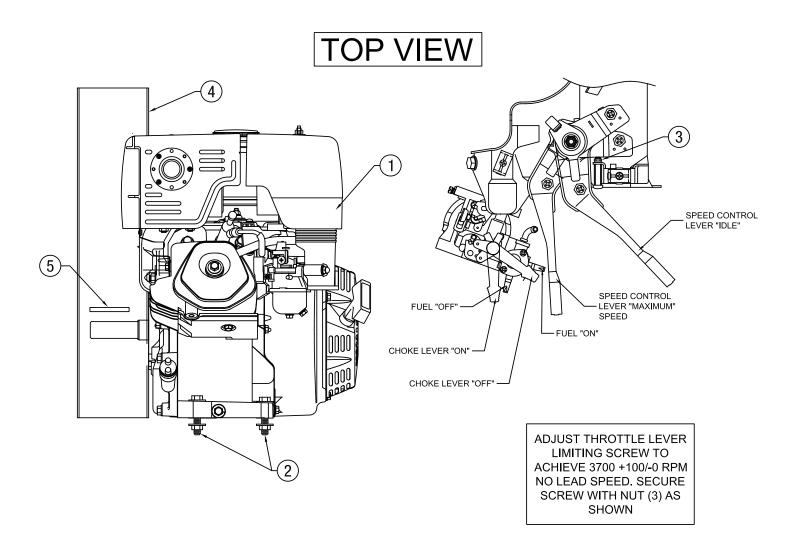


ITEM	PART #	DESCRIPTION	QTY
4	EN0600	13 HP Honda Engine with Recoil Start	1
ı	EN1700	13 HP Honda Engine with Electric Start with Recoil Backup	1
2	32103-02	Bolt Assembly (3/8" NC HHCS x 1-3/4" Long with (2) SAE Flat washer, and (1) Stover Lock Nut	4
3	45048-05	Throttle Stop Bolt Retaining Nut M5 x 0.8 Hex Nut Plated	1
4	32103-15	Heat Shield	1
5	024957	Key (1/4" SQ x 1-1/2" Long)	1

Page 32 055838P

# 1.12 - Electric Schematic for AR16 with 13HP Honda Engine (Recoil Start), Illustration and Parts

# SECTION 1 PARTS


# 13 HP HONDA ENGINE, MODEL GX390 RECOIL START, ELECTRICAL SCHEMATIC

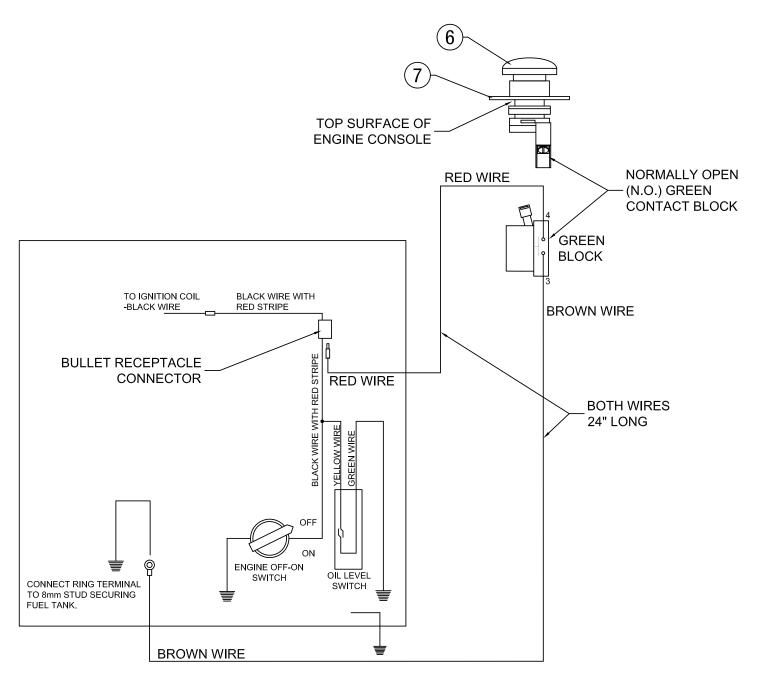

ITEM	PART #	DESCRIPTION	QTY
6	45049-25	Pushbutton, E-stop, 1N.O. Contact	1
7	42109-01R	"Emergency Stop" Legend Plate	1

# 1.13 - Electric Schematic for AR16 with 13HP Honda Engine (Electric Start), Illustration

#### 13 HP HONDA ENGINE, MODEL GX390 ELECTRIC START, ELECTRICAL SCHEMATIC

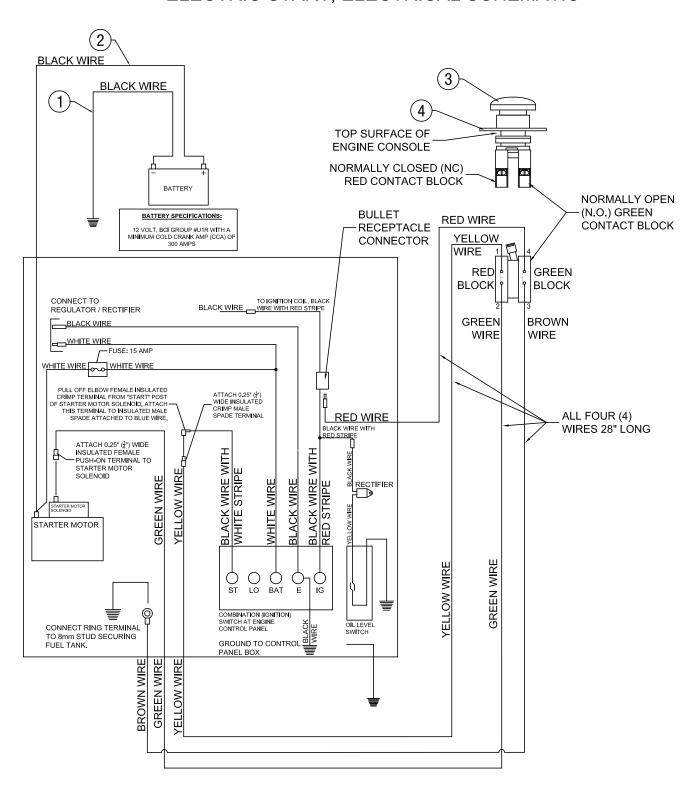

Page 34 055838P


# 1.13 - Electric Schematic for AR16 with 13HP Honda Engine with Electric Start, Parts List

# SECTION 1 PARTS


ITEM	PART #	DESCRIPTION	QTY
1	BF0200	Black Ground Cable x 10" Long	1
2	BF0100	Black Positive Cable x 36" Long	1
3	45043-04	Pushbutton, E-Stop, 1N.O & 1N.C Contact	1
4	42409-01R	"Emergency Stop" Legend Plate	1



# 1.14 - Electric Schematic for AR21 with 20HP Honda Engine with Electric Start, Illustration

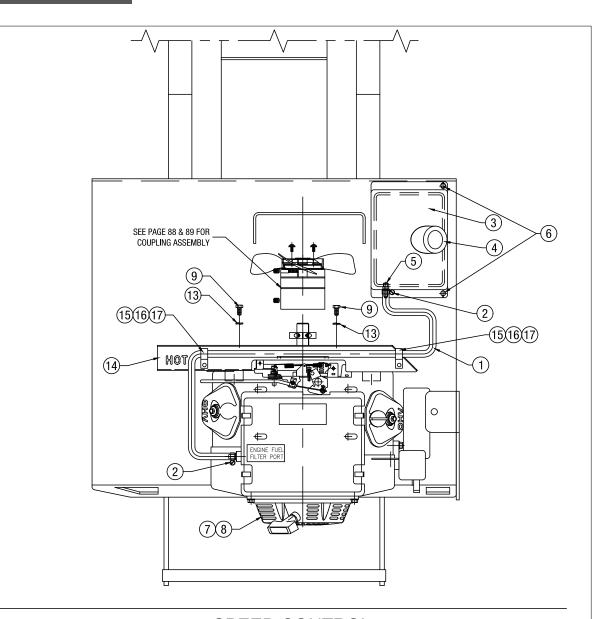

#### SPEED CONTROL

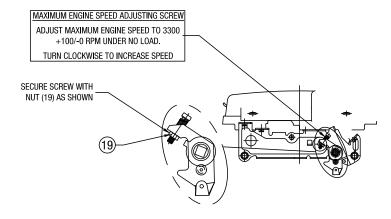

Page 36 055838P

### 1.14 - Electric Schematic for AR21 with 20HP Honda Engine with Electric Start, Parts List


### SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	039155	Hose, 1/4" Fuel Line	
2	019430	Fitting, Clamp, Hose, Mini, Size 4	
3	42123-10	Fuel Tank	1
4	42123-18	Fuel Cap	1
5	42123-22	Barbed Connector Fitting. Brass	1
6	42123-22	Bolt Assembly (3/8" NC HHCS x 1" Long with (2) USS Flat Washers and (1) Lock Nut; For # item 9)	2
7	45320-09	20 HP Honda Engine with Electric Start and Recoil Backup (less Muffler Assembly and Oil Filter Extension Kit)	1
8	42124-02	Muffler Assembly for item # 13	1
9	010035	Fastener, Bolt, HHCS, 3/8"-16 x 3/4", Grade 8	4
10	027265	Fastener, Clamp, Hose, #6 (for Breather Vent) [NOT SHOWN]	2
11	055642	Hose, Fuel Line, 7/16" I.D., Low Perm (for Breather Vent) [NOT SHOWN]	2.75 ft
12	010194	Fitting, 3/8" x 1/4", Male, Brass, Barb (for Breather Vent) [NOT SHOWN]	1
13	010091	Fastener, Washer, Lock, 3/8", Grade 8	4
14	42124-46	Heat Shield	1
15	42124-18	Bolt Assembly (1/4" NC HHCS x 1-1/4" Long with Lock Nut)	2
16	42124-19	Pipe Coupling	2
17	40112-68	1/2" Loom Clamp	2
18	32103-02	NOT SHOWN - Bolt Assembly (3/8" NC HHCS x 1-3/4" Long with (2) SAE Flat washer, and (1) Stover Lock Nut For attaching Engine to Buggy Frame)	4
19	45048-05	Fastener, Nut, Hex, M5 x 0.8 (Pre-March 2018)	1
20	020542	Fastener, Nut, 1/4-20, Stover	2

### SECTION 1 PARTS

# 1.14 - Electric Schematic for AR21 with 20HP Honda Engine with Electric Start, Illustration, continued

### 20 HP HONDA ENGINE, MODEL GX620 ELECTRIC START, ELECTRICAL SCHEMATIC

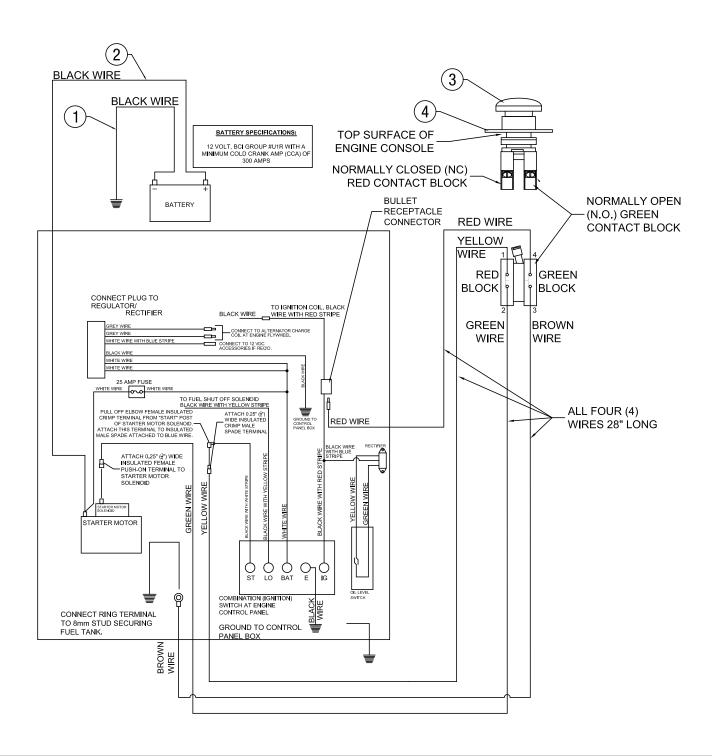

Page 38 055838P


### 1.14 - Electric Schematic for AR21 with 20HP Honda Engine with Electric Start, Parts List, continued

### SECTION 1 PARTS

ITEM	PART#	DESCRIPTION	QTY
1	BF0200	Black Ground Cable x 10" Long	1
2	BF0100	Black Positive Cable x 36" Long	1
3	45043-04	Pushbutton, E-Stop, 1N.O & 1N.C Contact	1
4	42409-01R	"Emergency Stop" Legend Plate	1

### SECTION 1 PARTS

### 1.15 - Propane Assembly, Illustration (Only Available on AR16 Model)

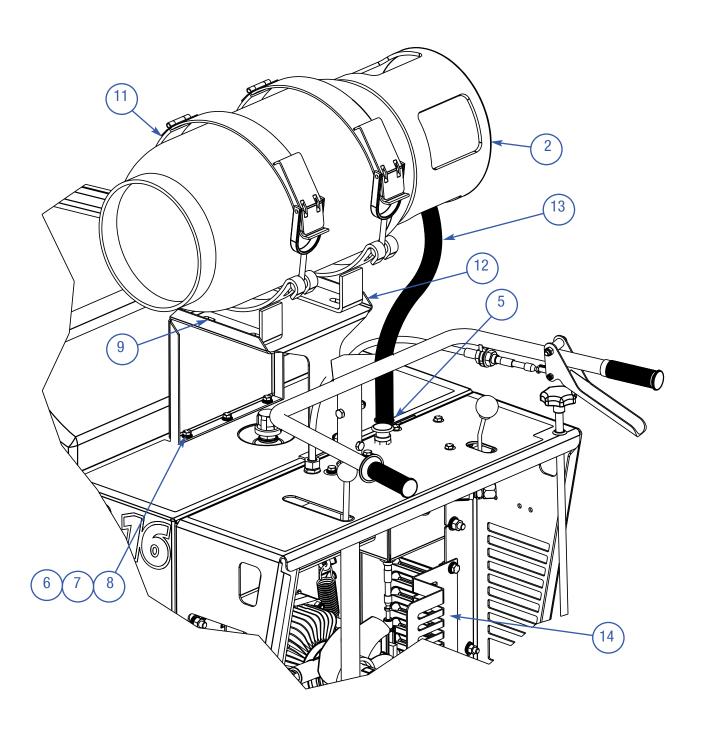

Page 40 055838P

# 1.15 - Propane Assembly, Parts List (Only Available on AR16 Model)

### SECTION 1 PARTS

ITEM	PART #	DESCRIPTION	QTY
1	064877	Engine, Honda GX390 Propane (Not Shown)	1
2	064878	Tank, Propane	1
3	064926	Cable, Red (Battery Positive)	1
4	064929	Lug, Boosting	1
5	024629	Grommet, 1 5/8" O.D. X 7/8" I.D.	1
6	010020	FSTN, HHCS 5/16"-18 X 1" - GRD8	4
7	010090	FSTN, LW 5/16" GRD8	4
8	010082	FSTN, FW 5/16" - GR8	4
9	012990	FSTN, Cable 3/8-16" X 1-1/4"	4
10	010464	FSTN, Nut, Nylock 3/8-16"	4
11	064879	KIT, Tank, Mounting Bracket	1
12	064849	Bracket, Propane Tank Mount	1
13	068069	Hose Assembly, Hose Fitting and Cylinder Connector	1
14	32105-02	Guard, Fan for Engine	1
15	066748	Regulator, Propane, T60-390-CERT (NOT SHOWN)	1

## SECTION 1 PARTS

### 1.16 - Filter Kits

	AR16 BUGGY			
ITEM	PART #	DESCRIPTION	QTY	
1	066441	KIT, AR16 BUGGY FILTER	1	
1.1	066440	FILTER, AIR - AR16 BUGGY (17210-ZE3)	1	
1.2	066437	FILTER, FUEL F/ AR16 BUGGY	1	
1.3	038937	FILTER, HYDRAULIC POWER UNIT	1	

AR16P (Propane)			
ITEM	PART #	DESCRIPTION	QTY
1	066443	KIT, AR16P BUGGY FILTER	1
1.1	066440	FILTER, AIR AR16 BUGGY (17210-ZE3)	1
1.2	038937	FILTER, HYDRAULIC POWER UNIT	1

	AR21 BUGGY			
ITEM	PART #	DESCRIPTION	QTY	
1	066442	KIT, AR21 BUGGY FILTER	1	
1.1	064832	FILTER, AIR - AR21 BUGGY	1	
1.2	064831	FILTER, OIL	1	
1.3	064833	FILTER, FUEL	1	
1.4	038937	FILTER, HYDRAULIC POWER UNIT	1	

Page 42 055838P

# Section 2 Decals

#### 2.1 - Decals, AR16 (Kit #: 066476)

DECAL - ALLEN ENG / 2 YEAR WARRANTY PART #: 066486 QTY: 1



DECAL - PROP 65 PART #: 069225 QTY: 1

WARNING Cancer and Reproductive Harm www.P65Warnings.ca.gov

**DECAL - PINCH POINT** PART #: 065917 QTY: 1



**DECAL - REFUELING** PART #: 066487 QTY: 1

 Leave 1 1/4 inch space at Do not overall or start engine near spilled gasoline. Do not add gasoline while engine is hot or running Do not operate while fuel cap is removed REFUELING INSTRUCTIONS

**DECAL - ASME SAFETY** PART #: 066492 QTY: 1

> This power buggy meets ASME B6.8-1993/ B56.8a-1994 Safety Standard 7.3.9.(b) 7.3.9(c), 7.3.10(f), and 7.3.10(d) for stability and braking.

CHECKER DECAL PART #: 066487 QTY: 4

> **ENGINE HOT DECAL** PART #: 066491

QTY: 1



**DECAL - FOAM FILLED** PART #: 056303 QTY: 6 FOAM FILLED

**DECAL - OPERATOR'S MANUAL** PART #: 065657 QTY: 1

CHECKER DECAL PART #: 066490 QTY: 1

CHECKER DECAL PART #: 066488

QTY: 4



**OPERATION & MAINTENANCE** MANUALS





Do not operate in an enclosed area which is an odorless deadly poison produce carbon monoxide



top of tank for fuel expansion





Page 44 055838P

### 2.1 - Decals, AR16 (Kit #: 066476)

### SECTION 2 DECALS



DECAL - SIDE STRIPE, RIGHT SIDE PART #: 066516 QTY: 1




DECAL - SIDE STRIPE, LEFT SIDE PART #: 066493 QTY: 1






#### 2.1 - Decals, AR16 (Kit #: 066476)

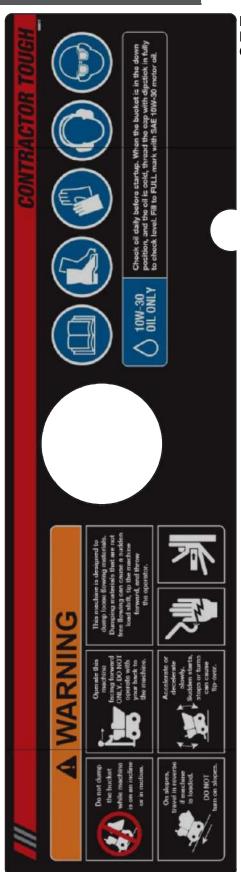

DECAL - TOP PANEL A PART #: 066517 QTY: 1

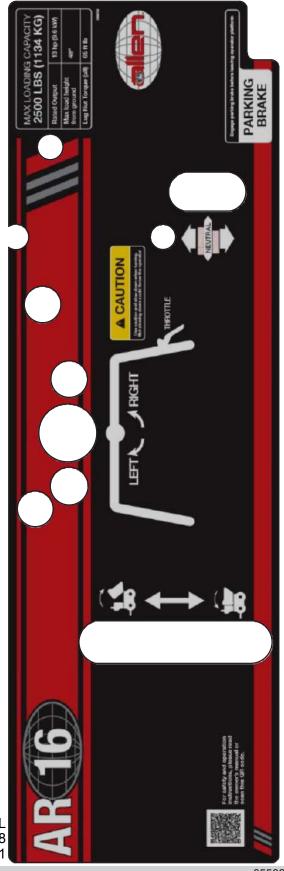

DECAL - TOP PANEL PART #: 066518 QTY: 1

Page 46 055838P

2.1 - Decals, AR16 (Kit #: 066476)

SECTION 2 DECALS



DECAL - ALLEN GLOBE PART #: 056400 QTY: 2



055838P

#### 2.2 - Decals, AR16P (Kit #: 066479)





### PROPANE GAS



**DECAL - OPERATOR'S MANUAL** PART #: 066562 QTY: 1

DECAL - CRUNCH / PINCH WARNING PART #: 066549

QTY: 1



CHECKER DECAL PART #: 066487 QTY: 4

**DECAL - ASME SAFETY** PART #: 066492

QTY: 1

OPERATION & MAINTENANCE MANUALS This power buggy meets ASME B6.8-1993/

B56.8a-1994 Safety Standard 7.3.9.(b), 7.3.9(c), 7.3.10(f), and 7.3.10(d) for stability and braking

DECAL - PROP 65 PART #: 069225

QTY: 1

WARNING Cancer and Reproductive Harm www.P65Warnings.ca.gov

**DECAL - PINCH POINT** PART #: 065917 QTY: 4



**DECAL - FOAM FILLED** PART #: 056303 FOAM FILLED

QTY: 6

DECAL - ALLEN ENG / 2 YEAR WARRANTY PART #: 066486 QTY: 1

**CHECKER DECAL** PART #: 066488 QTY: 4

CHECKER DECAL PART #: 066490

QTY: 1



Page 48 055838P

### 2.2 - Decals, AR16P (Kit #: 066479)

### SECTION 2 DECALS



DECAL - SIDE STRIPE, RIGHT SIDE PART #: 066530 QTY: 1




DECAL - SIDE STRIPE, LEFT SIDE PART #: 066529 QTY: 1






#### **2.2 - Decals, AR16P** (Kit #: 066479)

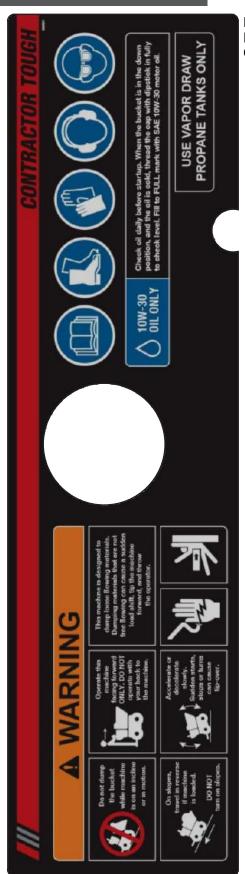

**DECAL - TOP PANEL A** PART #: 066531 QTY: 1

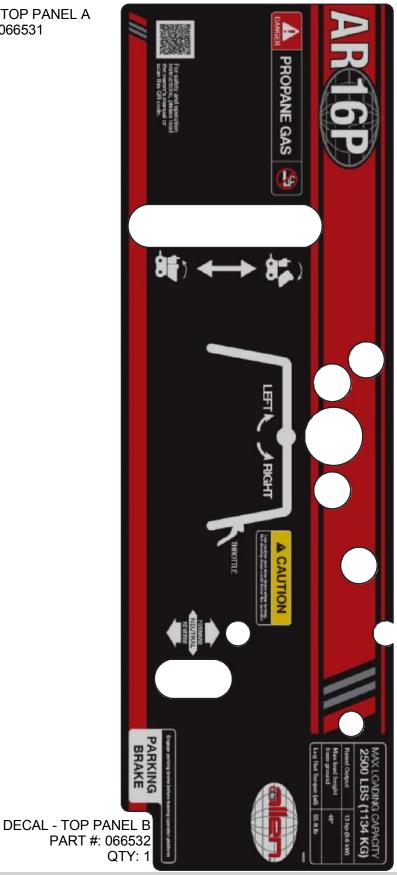

Page 50 055838P 2.2 - Decals, AR16P (Kit #: 066479)

SECTION 2 DECALS



DECAL - ALLEN GLOBE PART #: 056400 QTY: 2



055838P

2.3 - Decals, AR21 (Kit #: 066480)

> DECAL - ALLEN ENG / 2 YEAR WARRANTY PART #: 066486 QTY: 1



**DECAL - EPA** PART #: 065908 QTY: 1



**DECAL - PINCH POINT** PART #: 065917 QTY: 4



**DECAL - REFUELING** PART #: 066487 QTY: 1

 Leave 1 1/4 inch space at Do not add gasoline while engine is hot or running Do not operate while fuel cap is removed **DECAL - ASME SAFETY** 

CHECKER DECAL PART #: 066488

DECAL - PROP 65 PART #: 069225

QTY: 4



**DECAL - FOAM FILLED** PART #: 056303 QTY: 6 FOAM FILLED

CHECKER DECAL PART #: 066489 QTY: 4

QTY: 1 This power buggy meets ASME B6.8-1993/ B56.8a-1994 Safety Standard 7.3.9.(b), 7.3.9(c), 7.3.10(f), and 7.3.10(d) for stability and braking

PART #: 066492

ENGINE HOT DECAL PART #: 066491 QTY: 1



**DECAL - OPERATOR'S MANUAL** PART #: 065657 QTY: 1



**OPERATION & MAINTENANCE MANUALS** 





Do not operate in an enclosed area which is an odorless deadly poison produce carbon monoxide

Do not overall or start engine near spilled gasoline

top of tank for fuel expansion

REFUELING INSTRUCTIONS





PART #: 066490 QTY: 1


Page 52 055838P

#### 2.3 - Decals, AR21 (Kit #: 066480)

#### SECTION 2 DECALS



DECAL - SIDE STRIPE, RIGHT SIDE PART #: 066534 QTY: 1

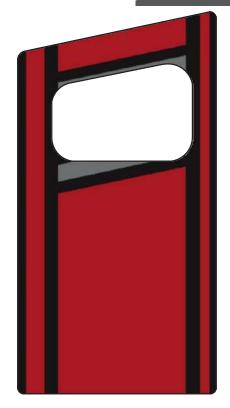


DECAL - SIDE STRIPE, LEFT SIDE PART #: 066533 QTY: 1






#### 2.3 - Decals, AR21 (Kit #: 066480)

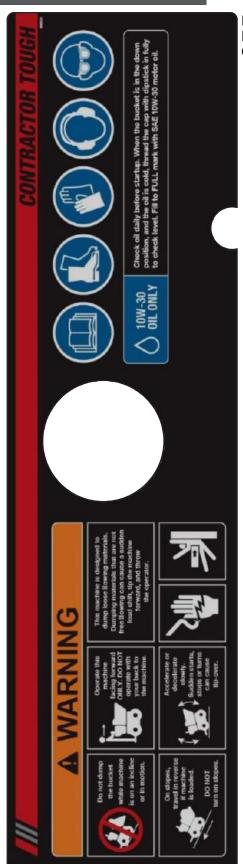

DECAL - TOP PANEL A PART #: 066535 QTY: 1

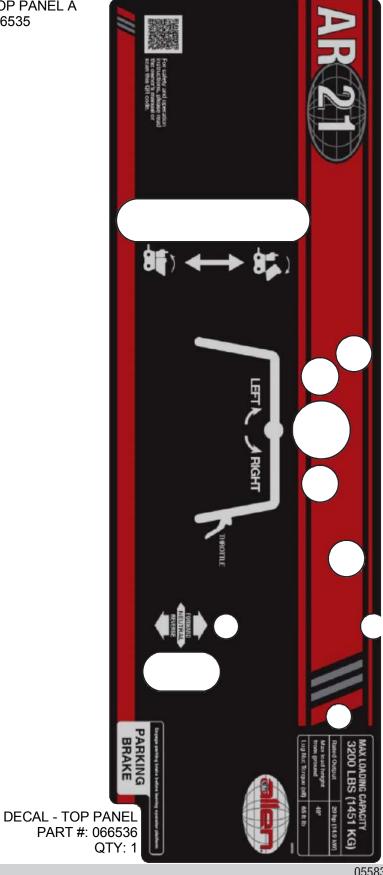

2.3 - Decals, AR21 (Kit #: 066480)

SECTION 2
DECALS



DECAL - ALLEN GLOBE PART #: 056400 QTY: 2



055838P

### **Revision Detail**

MANUAL REVISION DETAIL			
REVISION #	REVISION DATE	REVISION REFERENCE #	REVISION BY
-	03/2012	Initial Release	AW
Α	02/2016	-	AW
В	03/2018	-	MW
С	05/2018	MN 18-016, MN 18-046	MW
D	06/2018	MN 18-059	MW
E	06/2018	MN 18-109	MW
F	07/2018	MN 18-106	MW

Page 56 055838P

Copyright © 2018 Allen Engineering Corporation All rights reserved

All information, specifications, and illustrations in this manual are subject to change without notice and are based on the latest information at the time of publication. No part of this manual may be reproduced or transmitted in any form or by any means, electronics or mechanical, for any purpose, without the express written permission of Allen Engineering Corporation (AEC). AEC assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual.

Allen Products are covered under one or more of the following patent numbers:

**U.S. Design Patents**: 344,736; 400,542; 400,544; 402,998; 402,999; 403,332; 404,041; 404,042; 410,931; 413,127; 416,564; 465,897; 466,909; 474,203.

**U.S. Utility Patents**: 5,108,220; 5,238,323; 5,328,295; 5,352,063; 5,405,216; 5,476,342; 5,480,257; 5,480,258; 5,533,831; 5,562,361; 5,567,075; 5,613,801; 5,658,089; 5,685,667; 5,803,658; 5,816,739; 5,816,740; 5,890,833; 5,934,823; 5,967,696; 5,988,938; 5,988,939; 6,019,433; 6,019,545; 6,048,130; 6,053,660; 6,089,786; 6,106,193; 6,857,815; 5,288,166; 6,582,153 B1, 7,108,449; 7,114,876; 7,316,523; 7,690,864 B2

Canadian Patents: 2,039,893.

Printed in U.S.A.



P.O. BOX 819 PARAGOULD, AR 72451 USA

800.643.0095 (USA ONLY) / 870.236.7751

FAX: 800.643.0097 (USA ONLY) / 870.236.3934

WWW.ALLENENG.COM

#### **CONNECT WITH US ON**







